

PRODUCT INFORMATION**Care Instructions:**

Before cleaning any lamp shade or fixture, disconnect the power source (unplug from outlets).

To clean shades made of glass, apply a household glass cleaner to a soft cloth, and wipe gently.

To clean shades made of fabric, wipe gently with a soft, dry cloth or a feather duster.

Warranty:

For a period of twelve months from the date of purchase, we will repair or replace any product with a manufacturing or material defect; this is provided that the defect is not a result of normal wear and tear, or a natural characteristic of the material used. The warranty does not cover products used for commercial purposes. Items must be cared for in accordance with the care instructions supplied and a receipt presented in order to validate the warranty.

Please Note: Illustrations, photographs and specifications are not binding in detail. Items may vary in size - check all measurements on site before installation. Plumbing and electrical products must only be installed by a registered contractor.